

1 Download

Click on the link to open the webpage where the Mk6 v2 Software Update package can be downloaded. The size of the file is approximately 36 MB. This file is a self-extracting program.

The content of the downloaded file must be copied to the hard disk of the Terraloc. Downloading directly over the Internet from the Terraloc or copying the file or its content from another computer on a local network will achieve this.

2 Extract

Double click the downloaded file to extract its content. A dialog window will be shown where the place to extract the content can be chosen. A default place, *C:\Terraloc*, is given but this can be changed either by typing directly in the input field or by clicking the *Browse...* button and selecting the wanted place from the shown dialog. Press the *Unzip* button when the wanted place is given. Two folders will be created at the given place, *Boot Updater* and *SeisTW*.

3 Mk6 v2 Boot Updater

This program replaces the steps described in chapter 9.3 in “*Reference Manual for ABEM Terraloc Mk6 v2 and Mk8 with SeisTW for Windows XP*”.

This program shall be installed and run. There is a detailed description of this procedure in the *Terraloc Mk6 v2 Boot Updater.pdf* file that can be found in the *Boot Updater* folder. Please follow these instructions.

4 SeisTW

Install instructions for the SeisTW program can be found in the “*Reference Manual for ABEM Terraloc Mk6 v2 and Mk8 with SeisTW for Windows XP*” document, chapter 9.2.

5 Remove files

This step is optional.

The content of the self-extracting file can be deleted.

The Mk6 v2 Boot Updater can be uninstalled.